


AUTO STANDBY FUNCTION FOR THE SMART PUSH-PULL TORCH

The auto standby function is available in the smart push-pull torch from machine firmware version 1.1.1.110 or later and p&P firmware version 1.2.2.5 or later.

Auto Standby function: the auto stand by function can be activated/disactivated from the machine front panel in the push-pull-smart torch menu.

If the Autostandby is activated after 10 second the push-pull pushbuttons are not pressed the push buttons of the torch will be locked to avoid unwanted commands.

To exit from the locked condition press the “M” pushbutton for 3 seconds.

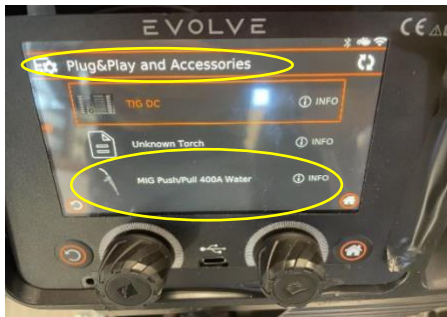

If the Autostandby function is disabled never will lock the push buttons in the push-pull smart torch

Procedure to enable/disable the auto standby mode.

Select the menu plug&play and accessories, select the push-pull torch,

to enable the autostandby mode select the switch in on position: color active ,

to disable the autostandby mode select the switch in off position: no color.

